IP Camera Quick Start Guide





Assemble the camera mount as shown and fix it to a stable surface using the screws and plugs provided. Do not mount the camera outside or anywhere that could expose it to water.

Connecting power

Connect the power adapter to the DC-IN socket on the camera as shown.



Connect the camera to your network hub using a network cable as shown.

IPCam Master v1.02			
Camera List :	Versio	n :	
Adapter Camera Name Lan IPCam	IP Address	🔽 Enable [онср
	192.168.0.28	MAC :	00:14:29:00:21:10
		Name :	IPCam
		IP :	192 . 168 . 0 .
		NetMask :	255 . 255 . 255 .
		Gateway :	192 . 168 . 0 .
		Http Port :	80

Use the supplied IPCam Master software to find the IP camera on a network and configure basic settings.

Before connecting the camera to a network, you will need to connect it directly to a host computer and run IPCam Master to set an IP address and other network settings.

See the user manual for more details about how to use the IPCam Master software.

Using the Browser

You can view the IP camera output using a standard web browser.

Enter the camera IP address in the browser address bar to connect to the camera.

Address http://169.254.0.1

Viewing - The Main Screen



When logged in you can view images and configure the camera. See the user manual for more detailed information on each function.

Note: The motion indicators flash red and blue alternately when motion is detected.